


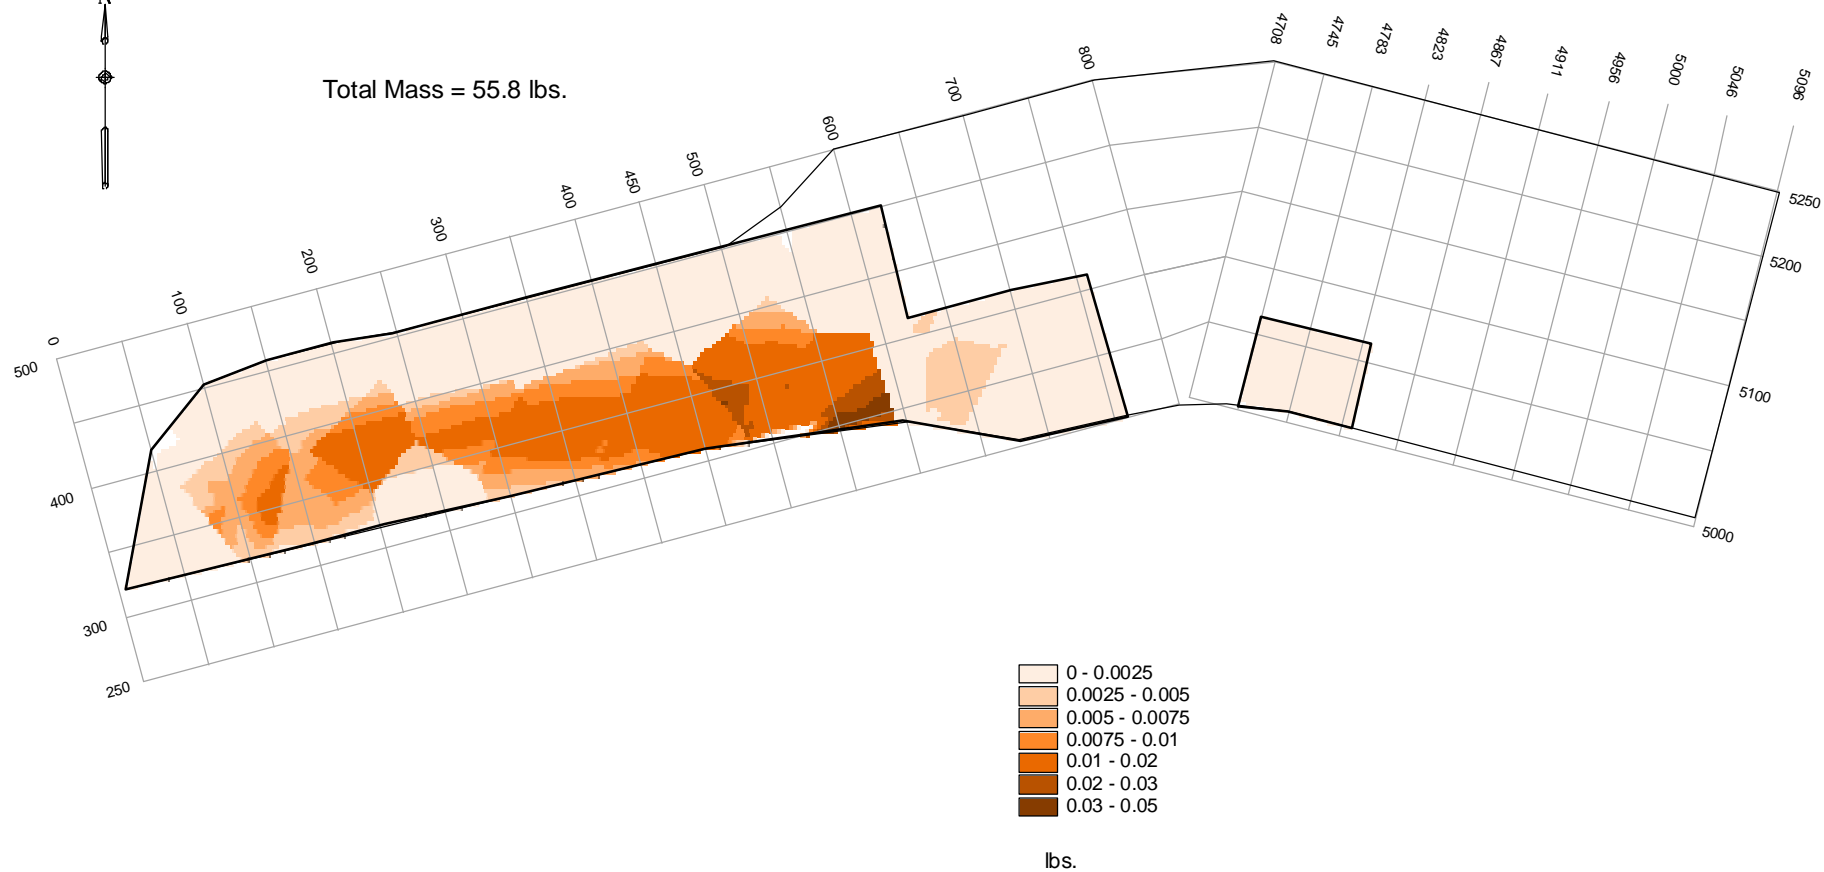

Total Mass = 55.8 lbs.



*PCB mass calculated as (Thickness x Concentration x Density) / 1x10⁶
Where: Thickness = sediment thickness (yds.)
Concentration = PCB concentration (ppm)
Density = sediment density (lbs./cu. yd.)

50 0 50 100 Feet

Deposit N

FIGURE F13

PCB Mass* - Phase I (Predredge)
Thiessen Polygons

Scale: AS SHOWN	Date: April, 2000
Prepared By: Foth & Van Dyke	By: SGL 97w027